Switch 8 Instruction of changing a gearbox









Step 2: Push the hook to open Top Lid




Step 3: Detach the installed gearbox



Step 6: Cover Top Lid, then power on



Step 5: Attach gearbox firmly

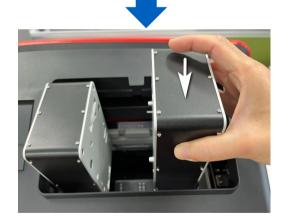

Step 4: Locate gearbox under guide rail